

ENGLISH WIRING DIAGRAM

**ACEPX16T1555CP
EMERGENCY LED DRIVER
DC-DC CONVERTER**

- Input Voltage: 120-277 V 50/60 Hz
- Input Current (max): 3.150 mA
- Input Power: 11 W
- Output Voltage: 18-55 V
- Output Current: 290 mA - 1067 mA
- Output Power: 16 W
- Battery Voltage: 10.8 V
- Battery Charge Current: 500 mA
- Battery Charge Time (max): 24 hrs
- Operating Duration (min): 90 min
- Output Class 2 Compliant
- Suitable for damp locations
- For factory or field installation
- For metal enclosed wiring system

CAUTION:
See instruction manual for installation, operating, and maintenance instructions. Service by Qualified Personnel Only. De-energize before opening. Sealed unit. BATTERY not replaceable. Replace entire unit when necessary.

ATTENTION:
Not suitable for air-handling or heated air outlets.

USE COPPER WIRE

CSA C22.2 No. 141
Emergency Lighting Equipment
Appareil d'éclairage de secours
Made in Taiwan - AM111

POWER

BC

TAA

UL

ACE LEDS
800-375-6355

**ACEPX16T1555CP
EMERGENCY LED DRIVER
Lithium-ion, 10.8 V, 5000 mAh**

- Battery Voltage: 10.8 V
- Battery Charge Current: 500 mA
- Battery Charge Time (max): 24 hrs
- Operating Duration (min): 90 min

BATTERY

POWER


BC

TAA

UL


ACE LEDS
800-375-6355

A. TYPICAL WIRING DIAGRAM FOR SWITCHING THE SWITCHED HOT AC POWER FOR THE NORMAL AC LED DRIVER

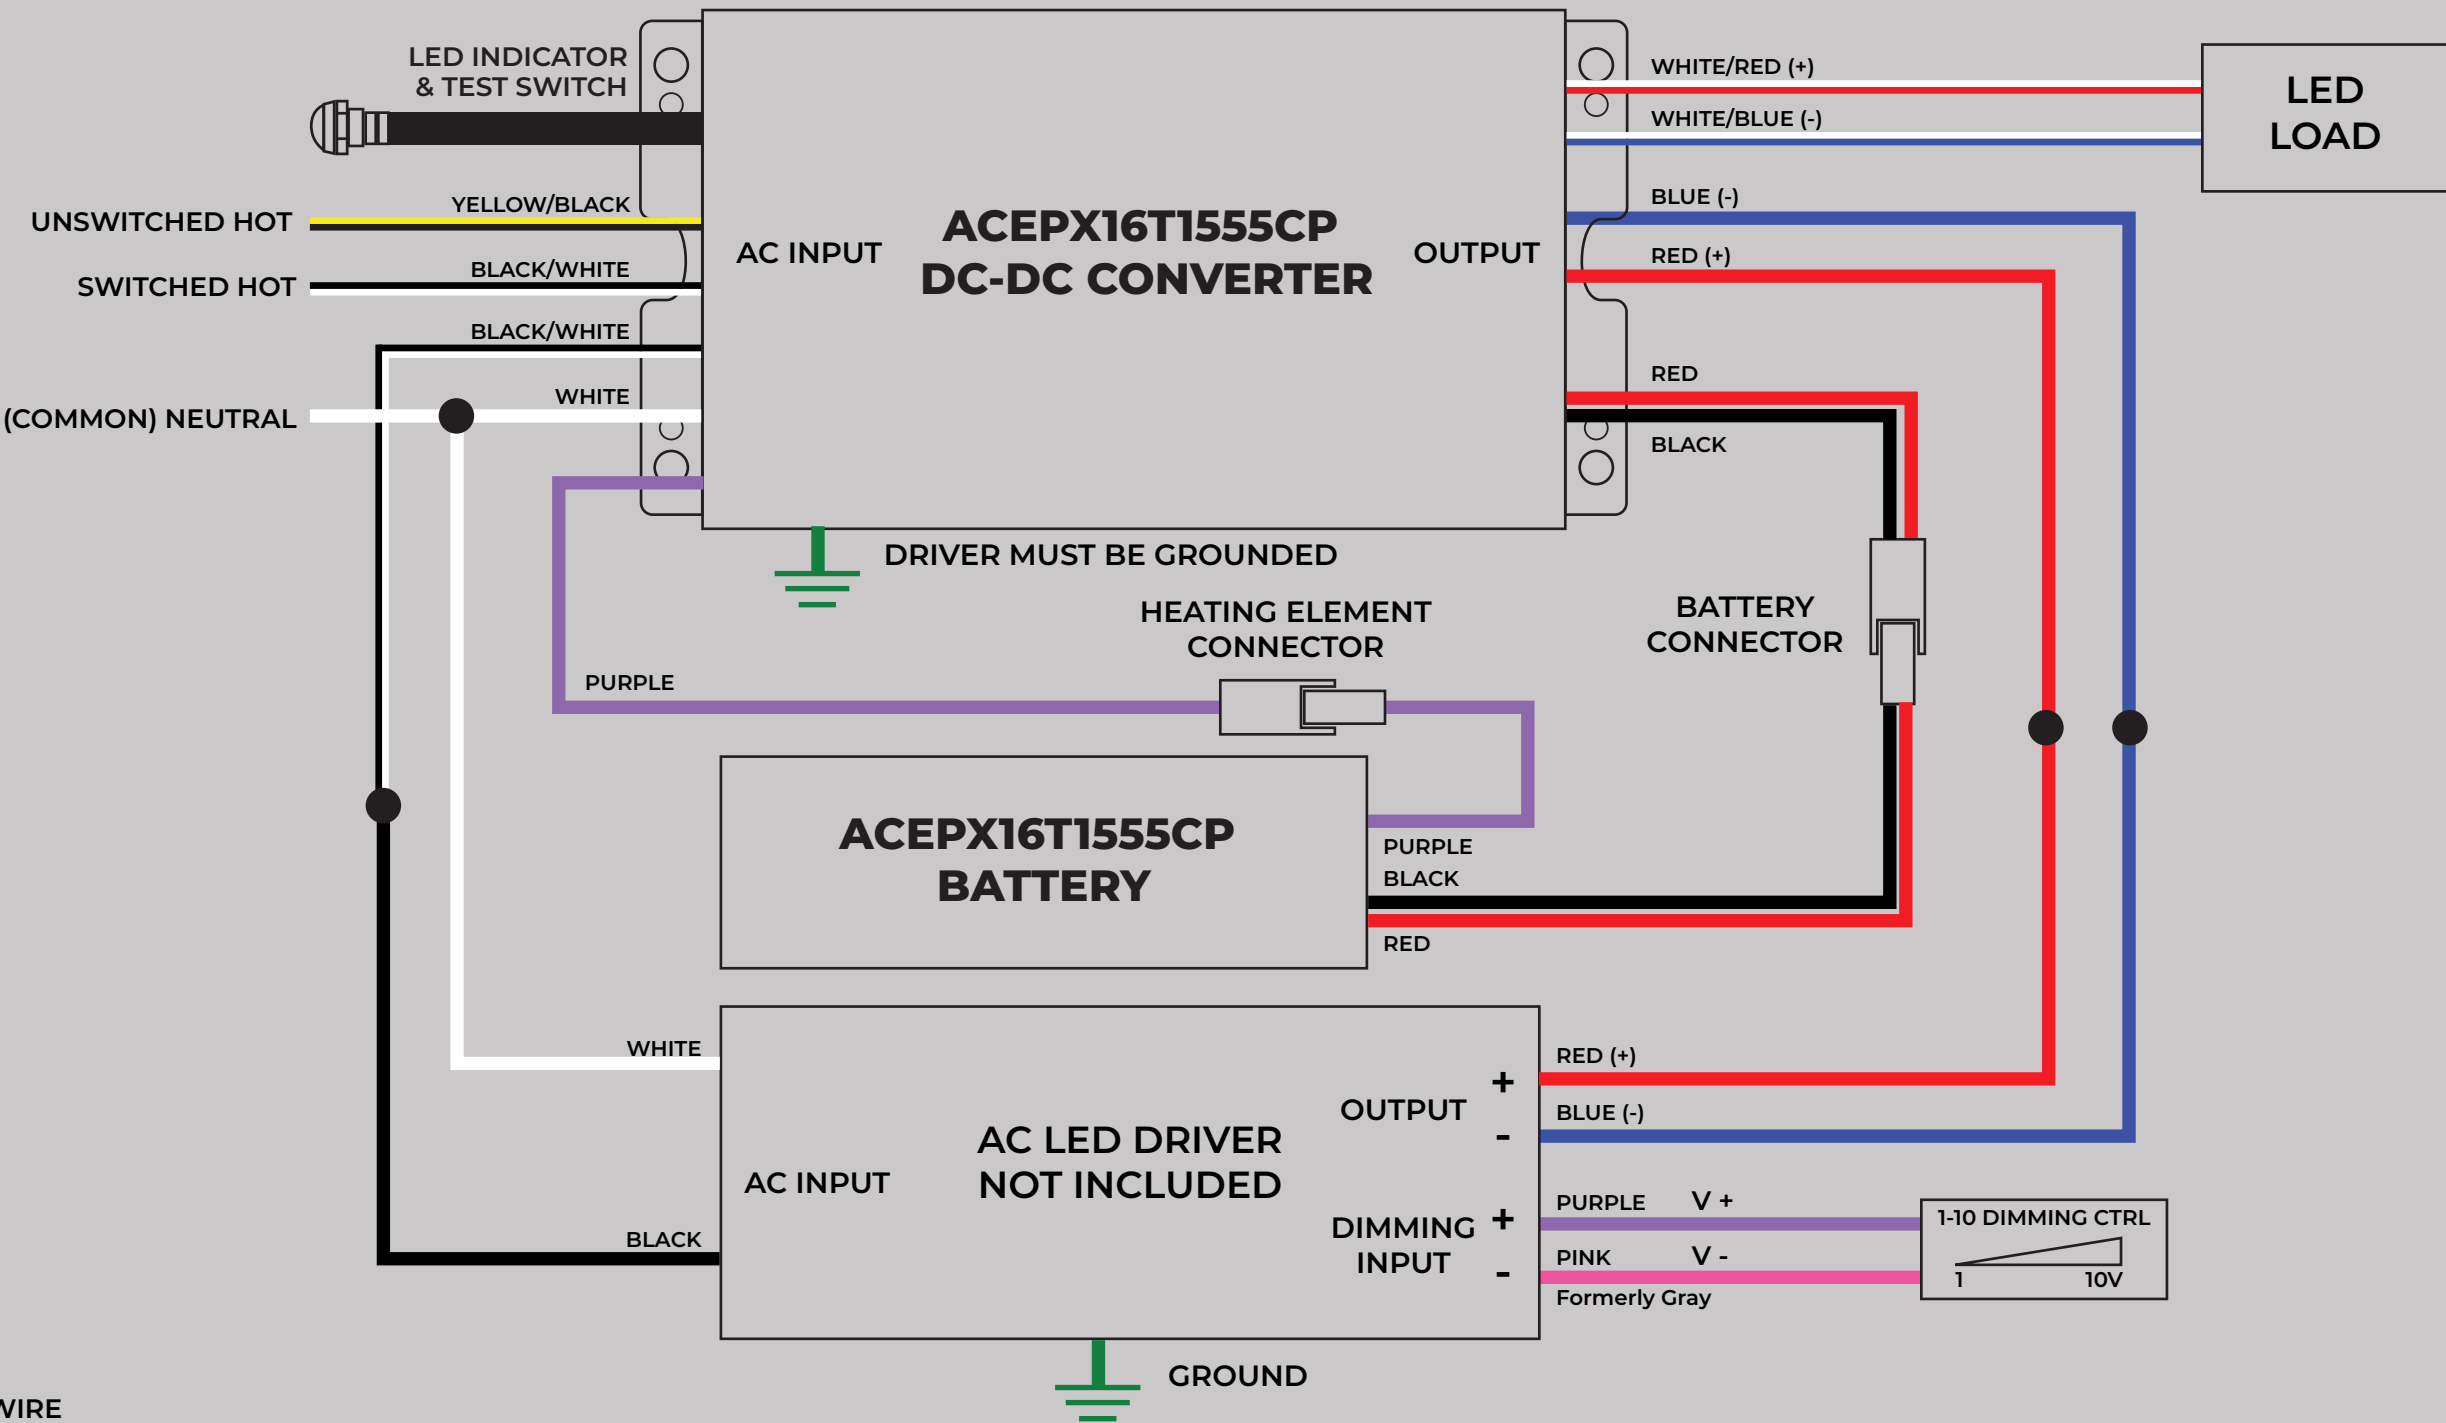

USE COPPER WIRE

B. TYPICAL WIRING DIAGRAM FOR SWITCHING THE NEUTRAL WIRE OF THE NORMAL AC LED DRIVER

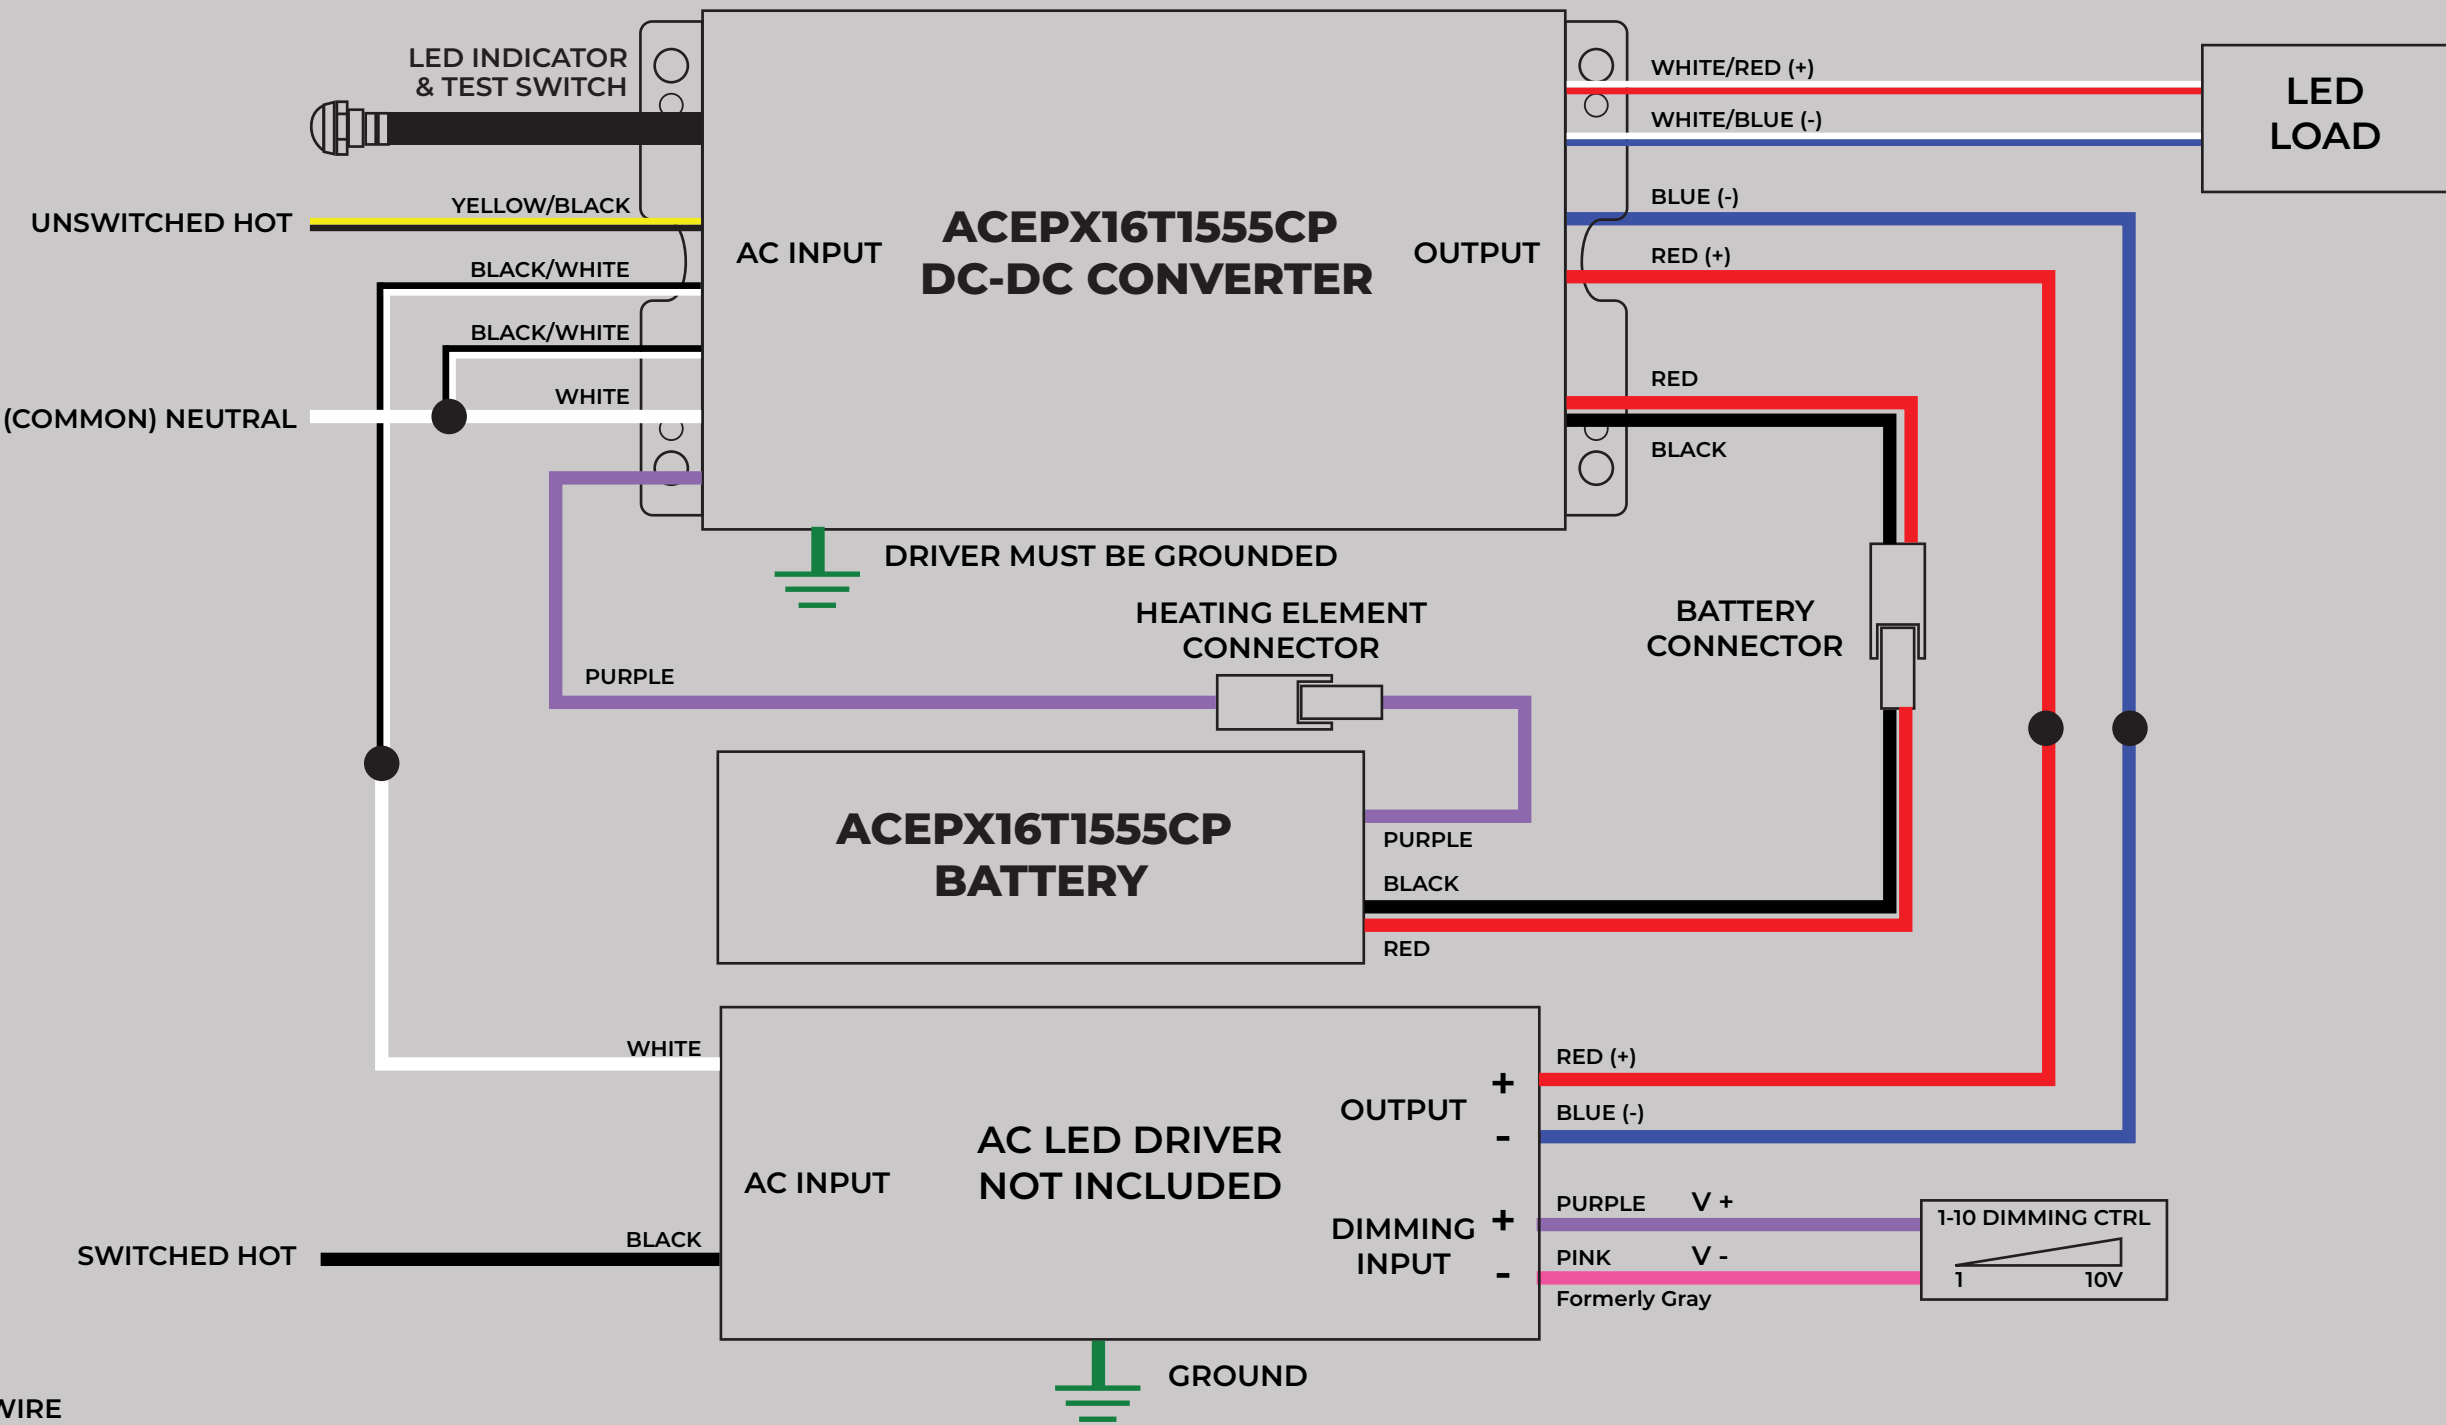

USE COPPER WIRE

DIAGRAMA DE CABLEADO ESPAÑOL

ACEPX16T1555CP

EMERGENCY LED DRIVER

DC-DC CONVERTER

- Input Voltage: 120-277 V, 50/60 Hz
- Input Current: 100mA
- Input Power: 1 W
- Output Voltage: 16-35 V
- Output Current: 250 mA - 1067 mA
- Output Power: 16 W
- Battery Voltage: 1.0-8 V

- Operating Charge Time: 500 min
- Battery Discharge Current: 900 mA
- Standby Current: 100 μA
- Suitable for home locations
- For factory or field installation
- For metal enclosed and open system

CSA C22.2 No. 14
Emergency Luminaires Standard
Approved in Canada
Made in Taiwan - AMTII

CAUTION:
See Installation manual for Installation, Operation, and Maintenance before
installations. Service by Qualified Personnel Only. de-energize before
operation. Sealed unit. BATTERY not replaceable. Replace entire unit
when necessary.

ATTENTION:
Not suitable for air-handling or heated air outlets.

USE COPPER WIRE









800-375-6355

A. DIAGRAMA DE CABLEADO TÍPICO PARA LA CONMUTACIÓN DE LA CORRIENTE CALIENTE CONMUTADA DE CA PARA EL CONTROLADOR DE LED DE CA NORMAL.

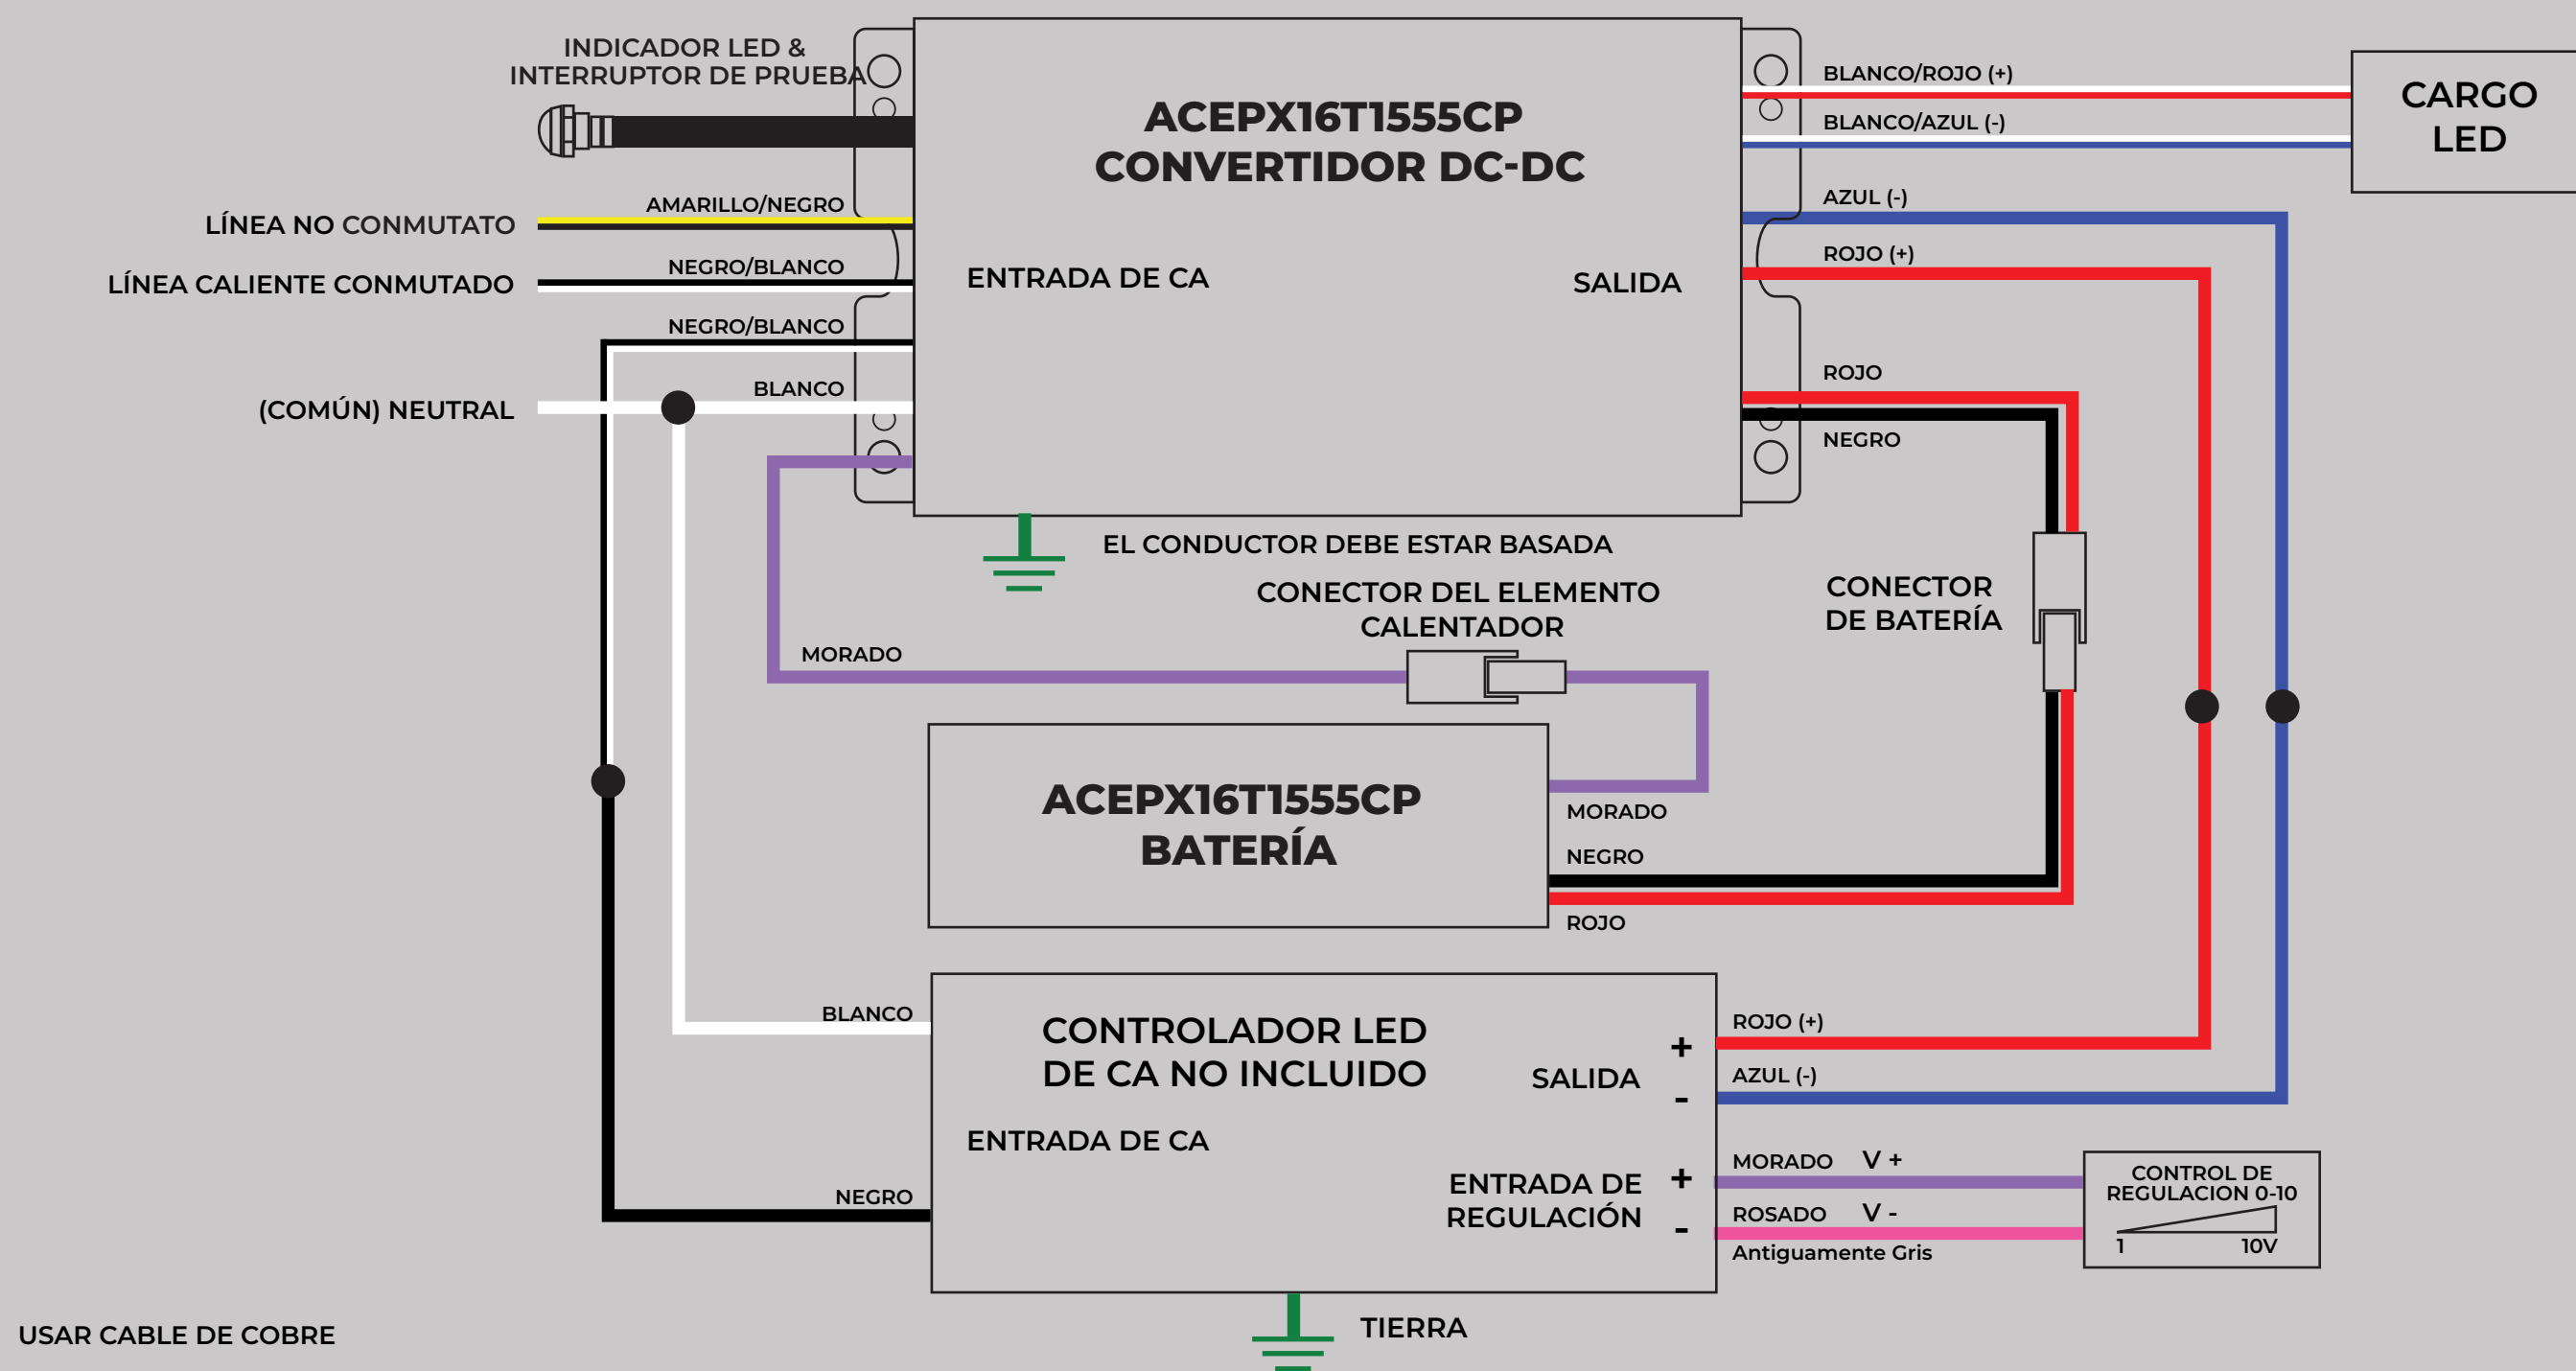

B. DIAGRAMA DE CABLEADO TÍPICO PARA CAMBIAR EL CABLE NEUTRAL DEL CONTROLADOR DE LED DE CA NORMAL.

