





Constant Current LED Driver

Model Number AC-50CDI.4APUQ

Input Voltage: 120-277V Input Frequency: 50/60Hz Side Mount/Leads Options

< I Sec. Start time Dim-to-I% (Default)


ELECTRICAL SPECIFICATIONS:

Outpu Power Max	Input	Input Current	Min PF (full load)	Max THD (full load)	Output Voltage	Output Current	T case Max	Min. Starting Temp**	Efficiency Up To	IP Rating	Dimming Protocol	Dimming Range
50VV	60W	0.5A@I20V 0.22A@277V	>90	<20	15-55V	400mA - 1400mA	90°C	-40°C	85%	64	0 to 10V	l to 100%

^{**} This driver can operate down to -40°C in a nondimming condition. Below 0°C some ficker may be observed.

observed. WIRING:

INPUT OUTPUT

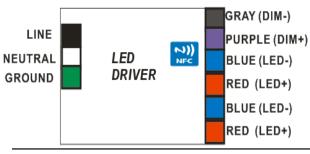

PHYSICAL:



AC-50CDI.4APUQ 12.4" 1.3" 1.08" 11.	Model	Length	Width	Height	Mounting
	AC-50CDI.4APUQ	12.4"	1.3"	1.08"	11.8"

SAFETY:

- Class P
- Class A sound rating
- Overload Protection
- Open/Short Circuit Protection
- LED driver has a life expectancy of 50,000 hours at Tcase of ≤75°C
- LED driver has a life expectancy of 100,000 hours at Tcase of ≤65°C
- Warranty: 5 yrs based on max case temp of 75°C; 3 yrs based on max case temp of 90°C*
- Input/Output Isolation

- FCC Title 47 CFR Part 15
- Surge Protection (3 KV)
- Dim-To-Off Programming Option o Active: Code = 78 05 01 01 o Inactive: Code = 78 05 00 01

INSTALLATION:

- Max Remote installation distance is 18 ft
- LED driver cases should be grounded
- LED drivers shall be installed inside electrical enclosures
- 18 AWG 600V/105C tinned stranded copper lead-wires are required for installation



*AC Electronics/AC LED Power Designs warrants to the purchaser that each LED Driver will be free from defects in material or workmanship for a period of 5 years when operated at max case temp of up to 75°C; 3 years from date of manufacture when operated at a max case temp of up to 90°C when properly installed and under normal conditions of use. See <u>aceleds.com</u> for complete warranty policy.

3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com





Performance Characteristics

Phone Instructions

First you must have a Android device (phone/tablet) with NFC-V app downloaded. Open App; then place the device on top of the driver matching up sensors until it syncs up Basic format

Write

Insert the appropriate code from chart above

Write


Successfully written will appear


To Check: Read Read

Shows you the Block - 00 00 00 00

This is where the code you input appears



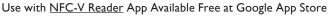

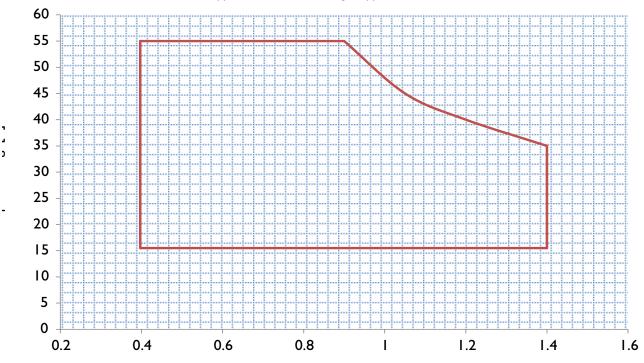

OutputCurrent[A]


CONTROL THE IOUT WITH THE PROGRAMMING WAND. DOWNLOAD SOFTWARE FROM http://www.aceleds.com/products-programmable.php


3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com




Performance Characteristics

Life Time v.s. Case Temperature Curve

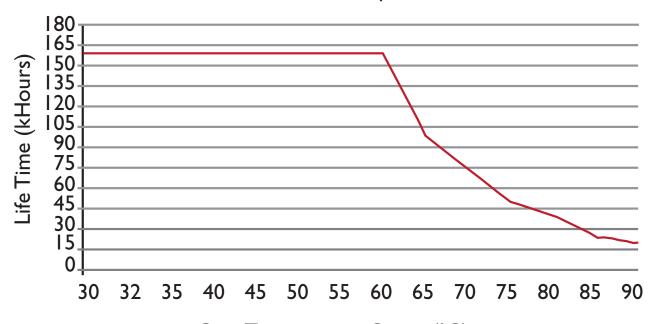


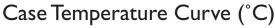


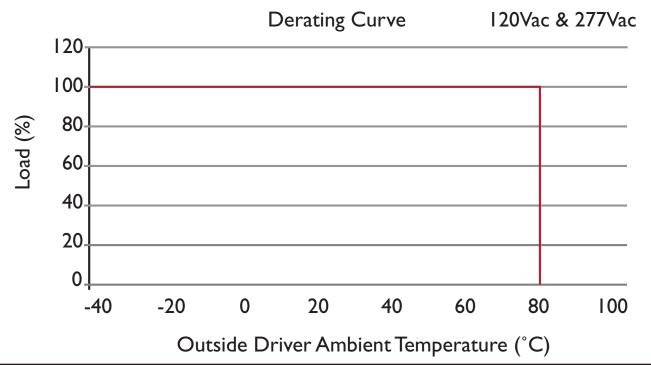

3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com

Performance Characteristics

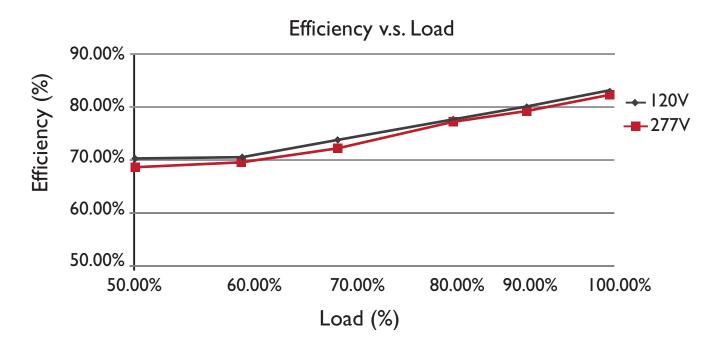

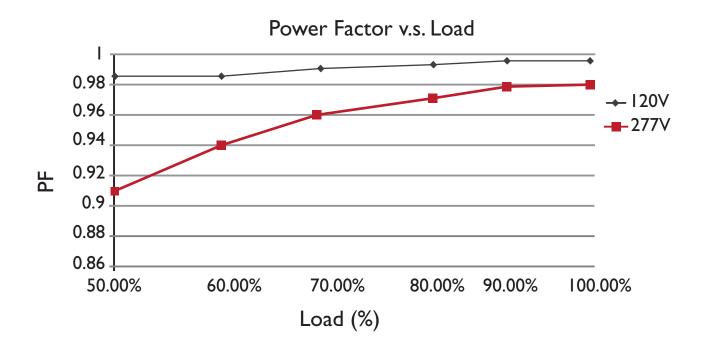


3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com




Performance Characteristics

Output Current v.s. Dimming

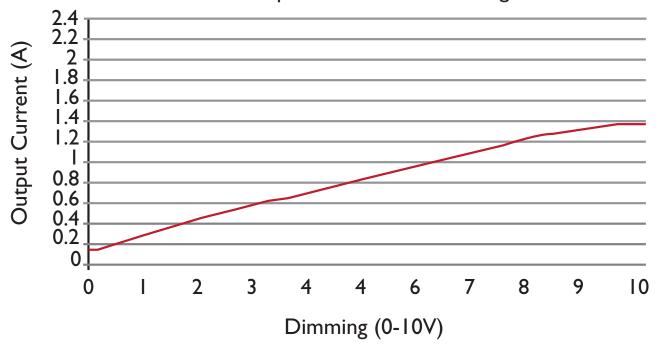

Output Current v.s. Resistance

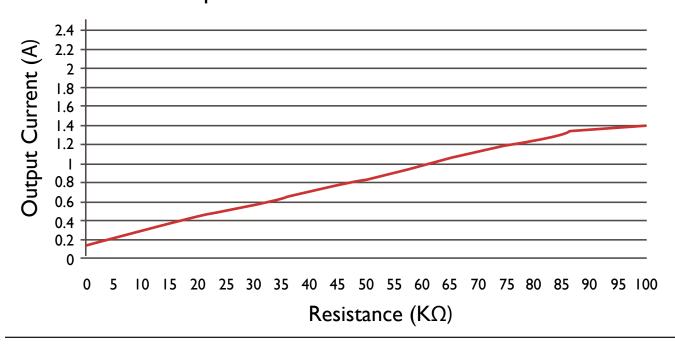

3401 Avenue D, Arlington, TX 76011 • 800-375-6355 • www.aceleds.com